
# DUCATI actuator model EVE 900T Installation diagram

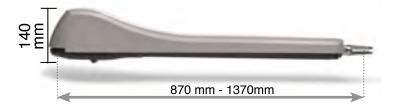

- EVE900 T FC
- EVE900 T FCA (with on board open & closed position mechanical limits) each model is also available in 24V version


### **Maximal wing dimension:**


Maximal wing lenght: up to 5m/ 16 ft Maximal wing weight: up to 500kg/ 1100lb



## **Multi-position fixing braket:**


choose the hole most suitable to your gate.

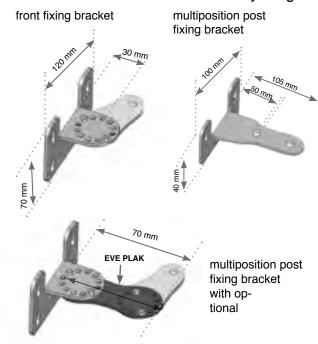

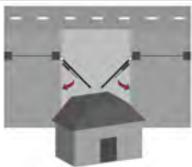

# **PULL TO OPEN OPERATION (opens towards inside)**

This means the gate operator is mounted on the inside of the property and pulls your gate in towards the property to open.

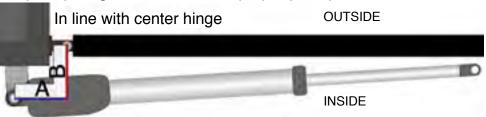

#### Rear pivot point of gate opener

measures are in cm

TAB	A-9	A-11	A-13	A-15	A-17	A-19	A-21	A-23	A-25	
B-9	105°21sec	115°22sec	120°23sec	120°23sec	125°23sec	130°25sec	135°26sec	135°26sec	120°23sec	
B-11	105°21sec	115°22sec	115°22sec	115°22sec	120°23sec	125°23sec	130°25sec	90°18sec	115°22sec	
B-13	100°20sec	105°21sec	110°21sec	115°22sec	115°22sec	120°23sec	125°23sec	125°23sec	105°21sec	
B-15	105°17sec	105°19sec	110°21sec	115°23sec	120°26sec	125°28sec	125°30sec	125°23sec	105°21sec	
B-18	100°18sec	105°20sec	110°23sec	115°25sec	115°27sec	120°29sec	100°28sec	105°21sec	100°20sec	
B-21	105°20sec	100°22sec	105°24sec	110°26sec	110°28sec					
B-25	95°23sec	100°25sec	105°27sec	110°29sec	110°31sec					
B-29	95°27sec	100°28sec	100°30sec	105°32sec						
B-33	95°30sec	95°32sec	90°32sec							
B-35	95°32sec	95°33sec								

#### METRIC CONVERSION

1 cm =	1/2" =	0,3
10 cm =	4"	

$$12 \text{ cm} = 43/4^{\circ} = 4.7^{\circ}$$

$$14 \text{ cm} = 5^{1/2} = 5.5$$


$$16 \text{ cm} = 6^{1/5}$$
" = 6,2"

$$18 \text{ cm} = 7^{"}$$

$$20 \text{ cm} = 7^{7/8}$$
" = 7,87"

$$25 \text{ cm} = 9^{3/4}$$
" =  $9.8$ "

35cm =	$13^{4/5} =$	13,7"
--------	--------------	-------

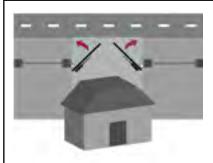


A = min. 8cm max. 14cmB = min. 8cm max. 14cm

# **PUSH TO OPEN OPERATION (opens towards outside)**

If your driveway slopes up after the gate, preventing it from swinging in. This means the gate operator is mounted on the inside of the property and pushes your gate out away from the property. Warning: only compatible with telescopic tube actuators. Check the overall dimensions before installation.

Warning:remember to reverse the polarity of the motor cables when connecting to the electronic board

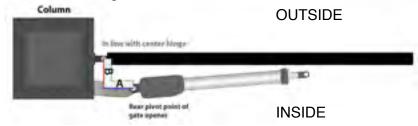

17