


■ The flashing must be installed on the pillar / wall and be clearly visible from inside and outside the property.
 in modo che sia perfettamente visibile dall'interno e dall'esterno della proprietà.
 The blinking is slow in opening and faster during closing.
 The installation of the flashing light is mandatory to ensure security on public transit area.
 The flashing lights model: FLASH 7712; 7512, HC7500 / 12 use a 12V max 10W bulb
 The flashing lights model: FLASH 7724; 7524 HC7500 / 24 use a light bulb max 10W 24V

External antennas can be added in case you need to deport the outside radio reception. Not recommended for use unless absolutely necessary given that they increase the risk of a brake circuit on the circuit board due to electrostatic discharges during thunderstorms.

■ flashing light **SW/ FLASH & external antenna STILO**

■ flashing blinker **SW/ FLASH with standrd bulb**

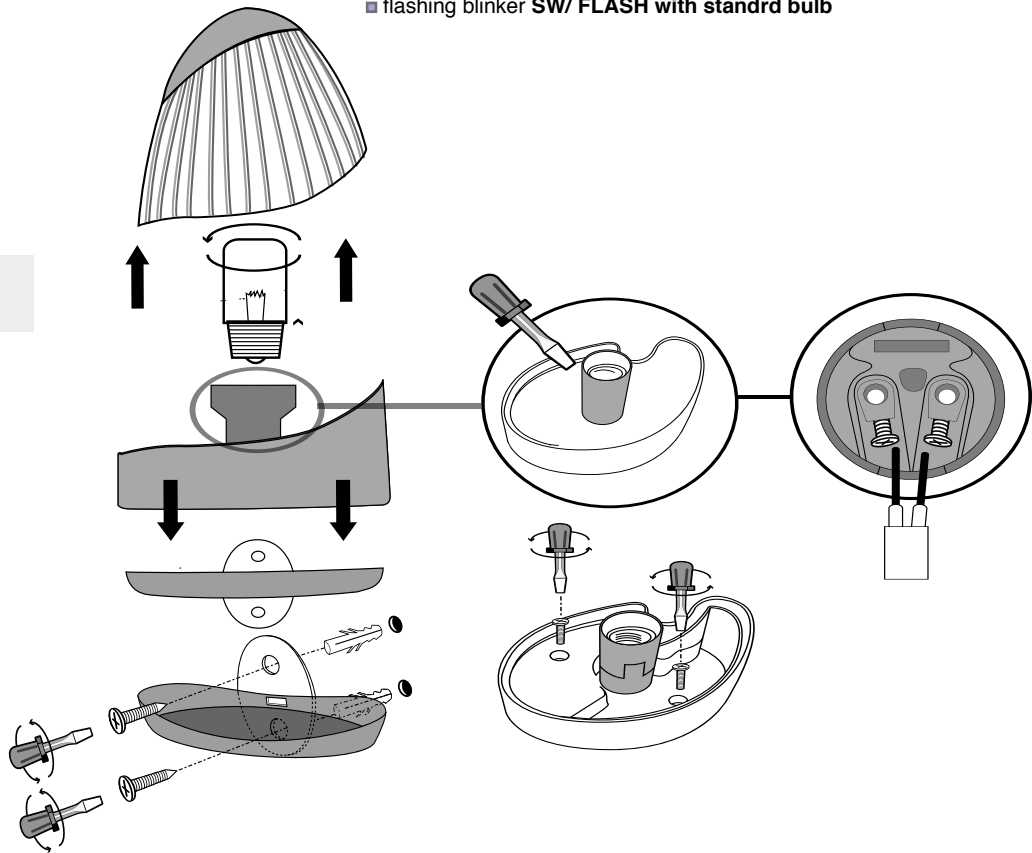

■ flashing blinker **SW/ FLASH with LEDmodule ac dc 12/24V:**

connect to Ducati opener board by using the DC connectos on LED light PCBw

