


DUCATI 3 channels radio rolling coded external receiver RIXY 6043 ROL

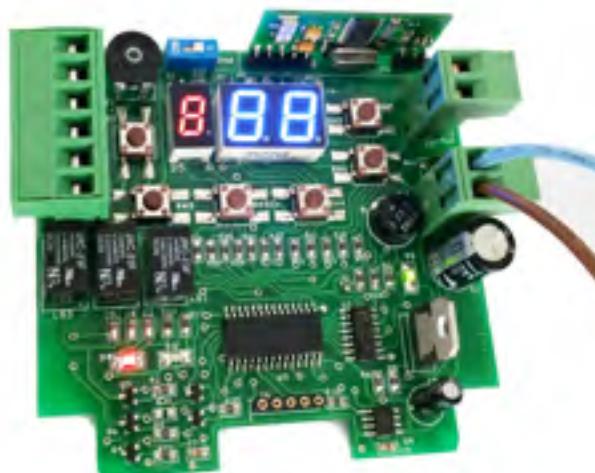

The 3-channel radio receiver allows you to control up to 3 automatic devices with DUCATI ROLLING CODE remote controls.

Each stored radio code is identified in a specific position number displayed on the display.

Channel CH3 allows also to set a timerized command (0- 6 minutes)

Radio transmission protocol: Ducati rolling code

Max. storage capacity: 100 radio codes.

monostable / timerized function 12/24V ac/dc

Frequency: 433,92 MHz

Relay contact capacity: 1A /30V

Working temperature: -10°C / + 60°C

Irradiation of antenna: in compliance with CE norma

Tensione di alimentazione 12/24 V ac/dc

Stand-by consumption: 38 mA

POWER SUPPLY: The radio receiver can be powered from the 12V or 24V power output of the device's electronic board. There are no polarity to be respected.

Before activation: Place the SWITCH ON to turn on the display.

The receiver performs a testing procedure. With completely empty memory the display will show: CC on the display. Wait until the display gets off.

Caution: to activate the display place the switch on ON position. Note: the displays will light up by pressing one of the programming buttons or upon receipt of a radio signal previously stored.

With switch on 1 = OFF the displays are always off

DISPLAY A


shows the channel
1 = CH1
2 = CH2
3 = CH3

DISPLAY B

shows the position number of the stored remote control (Max 100 total positions 00 to 99)

CAUTION:
SLIDE SWITCH function on / off display.
ON = Display on,
OFF (1) = display off

CH3 channel temporization adjustment 0-6 min. max.

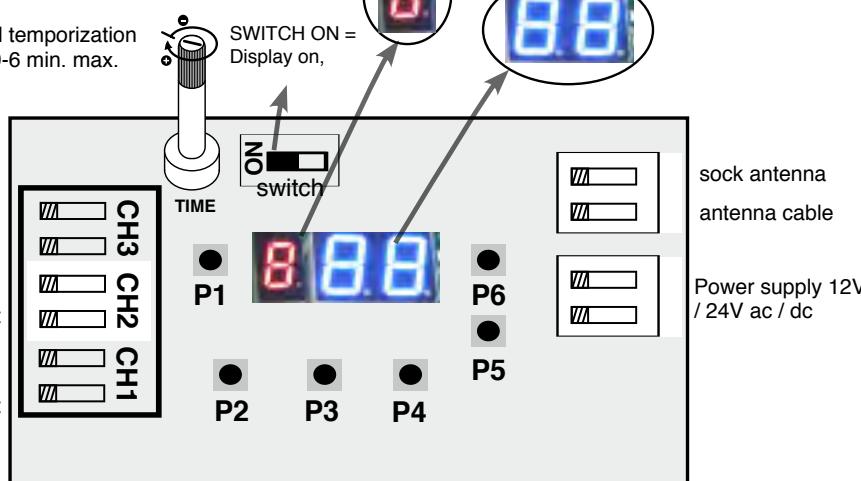

CHANNEL
3 Contact
N.O.bistable

CHANNEL 2
free monostable
contact NO without
polarization

CHANNEL 1
free monostable
contact NO without
polarization

1. How to memorize a remote control code (button)

- Push P1, the display switches on.
- by pressing push P6 you can choose which channel you will store the remote control button
- Push the remote control's button you wish to memorize. If the procedure is completed correctly the A display will blink and shows the channel on which the remote control button has been stored. The B display will show the position number where the remote control button has been stored. Example: 2 03 (channel 2 ,position 3)

Simultaneously the red LED lights on. Then the display turns off.

2. How to delete a specific previously memorized radio remote code (button)

- Press P2. The A display will show "P", the B display will show: --. Release P2
- displays will now show: P 00
- Identify the position number you want to delete by pressing push button P6 (increase) or P5 (decrease)
- Push again P2 and hold it pushed until the red LED lights on. The position number which is being deleted is blinking on the display. Once the code is deleted the display switches off. Release P2.

3. How to delete all stored codes

- Push and hold push P3 until the display shows: CC.
- Release P3. The process continues until the total erasure of the memory and can not be interrupted.

4. How to check how many positions are still available to memorize new codes:

- Press P4. the display will show the number of free positions
- Release P4